


# Precision Weighing Solutions

## Escali™

### User Manual

#### Keslo Digital Postal Scale

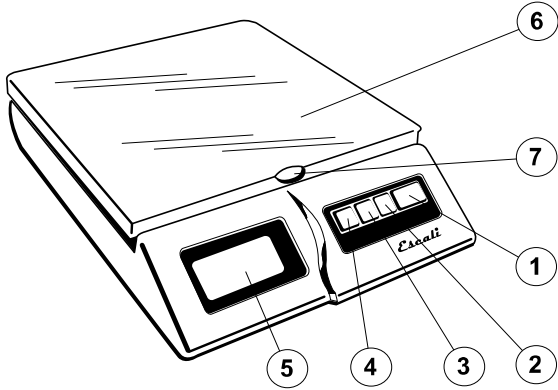

- |                   |                      |
|-------------------|----------------------|
| 1) On /Off button | 5) Display           |
| 2) Kg / Lb mode   | 6) Weighing platform |
| 3) Tare feature   | 7) Holder opener     |
| 4) Hold feature   |                      |

www.**Escali**.com

#### How to clear "Tare" Feature:

Press the "TARE" button again. Now the weight of all items will be displayed.

#### Changing the Weighing Mode:

Your scale can weigh in Kilograms/Grams, Ounces or Pounds/Ounces. The factory default is set to grams. You can simply change the weighing mode by pressing the "MODE" button. Your scale will keep the last used weighing mode in memory, and will return automatically to this mode when you turn the scale on.

#### Do not place overweight items on scale

Weighing items over the maximum weight capacity will cause an "O-Ld" to display. Immediately remove overweight items to avoid causing damage to your scale.

#### How to use the special built-in holder:

- 1) Before activating the scale, lift the built-in holder cover\*
  - 2) Press the "ON/OFF" button
  - 3) Place and secure item slowly into the special holder
- \*Please note - If the scale is activated before lifting the built-in holder cover, the scale may not operate properly. If this occurs, simply reset the unit by pressing the "ON/OFF" button and return to step 1.

**Power Source:** 9-volt battery or AC/DC adaptor

**Dimensions:** 10" x 7.75" x 2" (25.5cm x 20cm x 5cm)

**Increments:** 2/10th ounce (0.2 oz.) or 5 gram (5 g.)

**Capacity:** 15 Kilogram / 33 Pounds

**Weight Modes:** Kg/gm, ounces, and lb./oz.

**Auto Shut Off:** Turns off after 2 minutes of non-use.

**Warranty:** Manufacturer's five (5) year warranty, see www.escali.com for full details.

Thank you for purchasing an **Escali** Digital Scale.

Please read the following operation information to ensure the proper function of your new scale.

#### How to weigh:

- 1) Press the "ON/OFF" button
- 2) "0kg/0oz" will show on display
- 3) Select measuring units (kg/g, oz, lb/oz) with the "MODE" button
- 4) Place item slowly on the panel

#### How to use the "Hold" feature:

This feature allows you to see the weight of an item, after you have removed the item from the panel.

- 1) Press the "ON/OFF" button
- 2) Select measuring units (kg/g, oz, lb/oz) with the "MODE" button
- 3) Press the "HOLD" button. The word "Hold" will be displayed
- 4) Place item slowly on the panel. The scale will beep twice when the weight has been captured
- 5) Remove the item and its weight will display for 10 seconds

#### How to clear "Hold" Feature:

Press the "HOLD" button again and the word "Hold" will be removed from the display.

#### How to use the "Tare" feature:

This feature allows you to obtain the exact weigh of an item in a container, by subtracting the weight of the container.

- 1) Press the "ON/OFF" button
- 2) Select measuring units (kg/g, oz, lb/oz) with the "MODE" button
- 3) Place the container, without the item, slowly on the panel
- 4) Press the "TARE" button. The weight of the container will be removed. The display value will reset to "0kg/0oz"
- 5) Slowly add the item to the container. The display will show the weight of the item only
- 6) You can press the "TARE" button again to display the combined weight. Repeat step 4 to continue using the "TARE" function.

#### Additional Information

- 1) Make sure your scale is at room temperature and on a stable horizontal surface free of vibration.
- 2) This scale is not waterproof. Do not expose to moisture.
- 3) As this scale is a precision instrument, it must be handled with extreme care. Avoid rough treatment, shaking and vibration.
- 4) Do not disassemble this scale or the warranty will be void.
- 5) The display value may be affected by electromagnetic disturbances such as operating near a radio. If this occurs, move the device that is causing the disturbance and turn the scale off and restart.


#### Battery Replacement/Installation:

This unit comes with a low battery indicator. Please replace when the low battery symbol appears.

- 1) Remove the battery door
- 2) Install the 9-volt battery connections
- 3) Replace the battery door

#### Connecting the AC/DC adaptor:

Insert the adapter's plug into the matching outlet holes. Firmly push and adjust the plug until it is fully inserted into the scale.

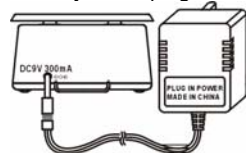

**Warning** – To prevent damage to your scale, use only an Escali adaptor or your warranty will be void

Escali's liability is limited to two (2) times the cost of the product

© Copyright Escali LLC, 2003